

NC PUNCH PRESS HIGH PERFORMANCE TOOLING

High Quality & Technology For The Future
CONIC
Since 1976

TRUMPF TYPE TOOLING



JAPAN QUALITY



ABOUT US

Conic has been produced quality punch tools since 1976 in Okayama Japan.

Our tools are used worldwide in the sheetmetal market and that quality is really satisfied from various production customers. Our policy is that we make a high quality tools in timely, in reasonable price to helping customers manufacture sheet metal parts in high productivity and reliability.

We have done a lot of development of new products such as Super Dry Punch (SDP), Conic Long life Punch (CLP), Conic Hard Punch (CHP) for last long tools.

We recently introduced PROTECH series tool to the market and market reflect strong praise.

Conic would like to be your punch press tool partner.
We look forward to serving you.

QUALITY

Certificate



Okayama factory :

ISO 9001:2015 provide superior Quality Management System in 1998 Conic Corp, received ISO9001 authorization, and it has been recognized as a very reliable company, both on the international front and Japan.



COMPANY HISTORY

- 1976 Established.
- 1979 Tokyo Sales Office opened.
- 1985 Okayama Factory opened.
- 1990 "International Sheet Metal Symposium" held by the company.
- 1992 Tool information and order receiving office was opened.
- 1993 Osaka Branch opened in Higashi-Osaka city.
- 1993 Head Office moved into Okayama Factory.
- 1998 Okayama factory was registered under required operation of international quality management system "ISO-9001".
- 1999 "Super Dry Punch" newly developed and launched.
- 2000 Internet order and quote receiving system was opened.
- 2002 "Conic Hard Punch" newly developed and launched.
- 2009 PROTECH series tooling newly developed and launched.
- 2012 Thailand Factory opened.
- 2013 "Conic Long life Punch" newly developed and launched.
- 2018 The Representative office in Vietnam opened.




SPECIFICATION OF CONIC TOOLING

■ Various Shapes

STANDARD SHAPES	WITH RADIUS CORNERS	CORNER ROUNDING
<ul style="list-style-type: none"> ■ ROUND (RO) ■ OBOUND (OB)  	<ul style="list-style-type: none"> ■ SQUARE (SQ) ■ SINGLE D (SD)  	<ul style="list-style-type: none"> ■ RECTANGLE (RE) ■ DOUBLE D (DD)  
	<ul style="list-style-type: none"> ■ SQUARE WITH RADIUS CORNERS ■ RECTANGLE WITH RADIUS CORNERS  	<ul style="list-style-type: none"> ■ CN-42 ■ CN-41  

Note : Square and Rectangle punch corner has small radius (R0.2) for prevent crack of punch tip.


If it is not necessary, please inform us.

SPECIAL SHAPES (CLASS-1)	SPECIAL SHAPES (CLASS-2)
         	         



SPECIAL SHAPES (CLASS-3)	SPECIAL SHAPES (CLASS-4)
         	<p>More complicated figure</p> <p>When make order, please inform to us the center position of the tool.</p> <p>CONIC is possible to produce other than this form list, please contact us.</p>

SPECIFICATION OF CONIC TOOLING

■Shear Angle Type For Punch

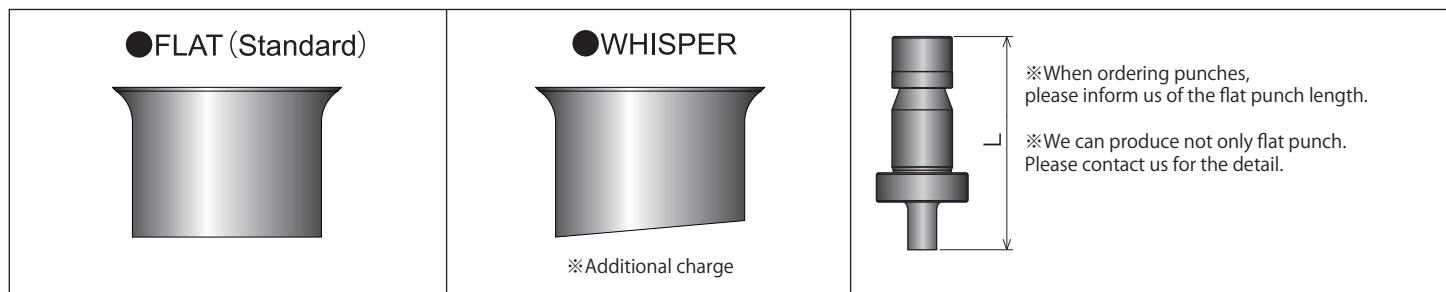

■Prevent Slug Pulling

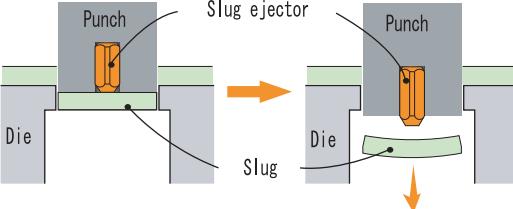PUNCH Slug Ejector Slug ejector push down the slug. It will be installed to over $\phi 4$ for round and over 6 mm width shape tool as our standard. Please contact us, when punch thick material sheet or hard material with small punch diameter.	
DIE Double taper Die Standard shapes and special shapes have this function as standard.	

SPECIFICATION OF CONIC TOOLING

■Conic Original Coating



Perfect tool for stainless steel !

Super Dry Punch (SDP)

This is our best tool. Incredible durability and defeated the common sense that "Stainless is hard to process".

This tool is suitable for night time unattended operation and dry (no oil lubrication on the sheet metal) condition punching. Super Dry Punch (SDP) is available with only the following shapes.

■ROUND (RO) ■SQUARE (SQ) ■RECTANGLE (RE) ■OBROUND (OB) ■SQUARE with R RECTANGLE with R



(Less than R10)

Perfect tool for thick material!

Heavy Duty Punch (HDP)

High performance for all purpose, especially for thick material.

Coating with excellent heat resistance.

The coating is difficult to peel off even with heat generated continuously. Special shapes are also available for this treatment.

Most efficient in long life and cost !

Conic Long life Punch (CLP)

High performance for all purpose, especially for mild steel, galvanized steel with high corrosion resistance !

Special shapes are also available for this treatment.

Ultra cost performance tool for reasonable price !


Conic Hard Punch (CHP)

Reasonable price and suitable for all purpose.

CHP shows high performance reducing adhesion and galling which is more likely to be caused by processing Aluminum and Coated steel sheet.

Total Performance	Punch type	Aptitude			
		Stainless steel (SUS)	Mild steel (SPCC)	Aluminum	Galvanized
	Super Dry Punch (SDP)	★★★★★★	★★★★★★	★★★★	★★★★
	Heavy Duty Punch (HDP)	★★★★★★	★★★★★★	★★★★★★	★★★★★★★
	Conic Long life Punch (CLP)	★★★★★	★★★★★★	★★★★★★	★★★★★★★
	Conic Hard Punch (CHP)	★★★	★★★★	★★★★★	★★★★★
	HSS	★★	★★★	★★★★	★★★★
	D2	★	★	★★	★

1

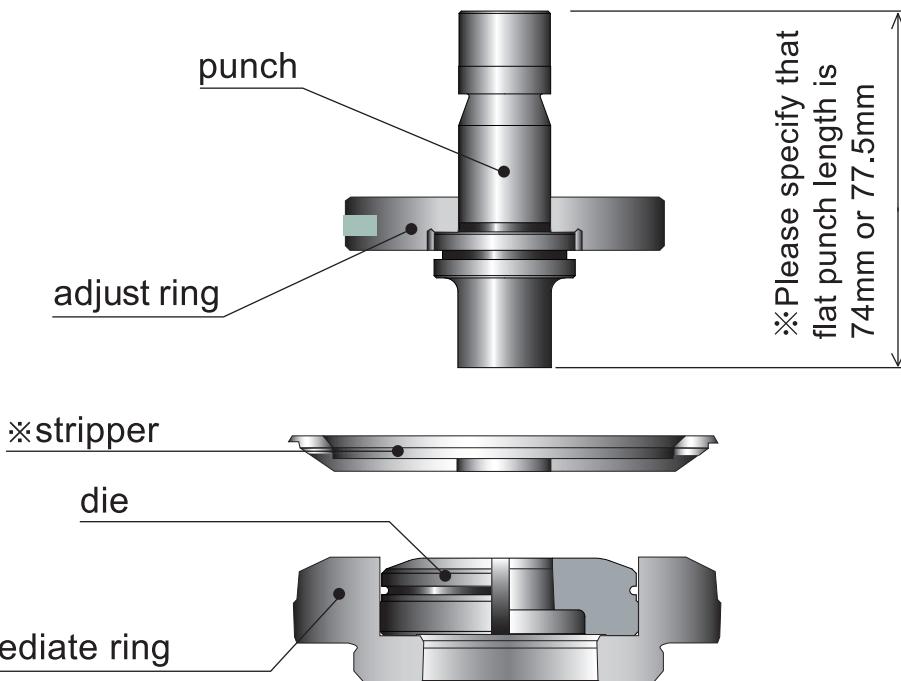


	Shape	Dimension(mm)	
Punch (HSS)	ROUND	cutting edge diameter	Φ 1 or more – Φ 2 or less
		cutting edge diameter	more than Φ 2 – Φ 30 or less
	SQUARE	one side length	Φ 1 or more – Φ 20 or less
	RECTANGLE OBROUND SD WD	diagonal dimension	Φ 1 or more – Φ 30 or less
Die (D2)	ROUND	cutting edge diameter	Φ 1 or more – Φ 32 or less
	SQUARE	one side length	Φ 1 or more – Φ 22 or less
	RECTANGLE OBROUND SD WD	diagonal dimension	Φ 1.8 or more – Φ 32 or less
	ROUND SQUARE RECTANGLE OBROUND SD WD	based on the punch	

※Extra small taper is applied to standard strippers in order to prevent marks.
If you do not need the extra small taper, please order flat stripper.

TRUMPF TYPE 2

2

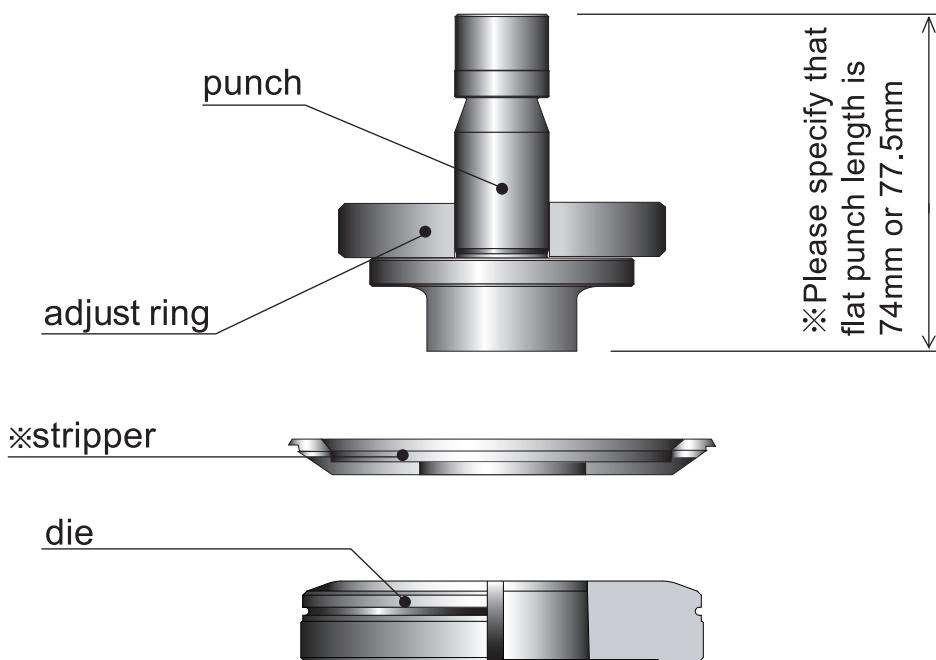


	Shape	Dimension(mm)	
Punch (HSS)	ROUND	cutting edge diameter	more than $\Phi 30$ – $\Phi 76.2$ or less
	SQUARE	one side length	$\Phi 1$ or more – $\Phi 50.8$ or less
	RECTANGLE OBROUND SD WD	diagonal dimension	$\Phi 1$ or more – $\Phi 72$ or less
Die (D2)	ROUND	cutting edge diameter	$\Phi 1$ or more than $\Phi 32$ – $\Phi 77$ or less
	SQUARE	one side length	$\Phi 1$ or more than $\Phi 22$ – $\Phi 52$ or less
	RECTANGLE OBROUND SD WD	diagonal dimension	$\Phi 1.8$ or more than $\Phi 32$ – $\Phi 72$ or less
※Stripper	ROUND	based on the punch	
	SQUARE		
	RECTANGLE OBROUND SD WD		

※Extra small taper is applied to standard strippers in order to prevent marks.
If you do not need the extra small taper, please order flat stripper.


TRUMPF MULTI TOOL, ACCESSORIES

5st

10st




	Type	Shape	Dimension(mm)	
Punch (HSS)	5st	ROUND	cutting edge diameter	$\Phi 1$ or more – $\Phi 2$ or less more than $\Phi 2$ – $\Phi 16$ or less
		SQUARE	one side length	1 width or more – 2 width or less more than 2 width
		RECTANGLE OBROUND SD WD	diagonal dimension	1 width or more – 2 width or less more than 2 width
	10st	ROUND	cutting edge diameter	$\Phi 1$ or more – $\Phi 2$ or less more than $\Phi 2$ – $\Phi 16$ or less
		SQUARE	one side length	1 width or more – 2 width or less more than 2 width
		RECTANGLE OBROUND SD WD	diagonal dimension	1 width or more – 2 width or less more than 2 width
Die (D2)	5st	ROUND	cutting edge diameter	$\Phi 1.15$ or more – $\Phi 16.6$ or less
		SQUARE	one side length	1 width or more
		RECTANGLE OBROUND SD WD	diagonal dimension	1 width or more
	10st	ROUND	cutting edge diameter	$\Phi 1.1$ or more – $\Phi 11.1$ or less
		SQUARE	one side length	1 width or more
		RECTANGLE OBROUND SD WD	diagonal dimension	1 width or more



	Type	Shape
Stripper	Open-Type	–
		ROUND
	Fit-Type	SQUARE
		RECTANGLE OBROUND SD WD
10st	Open-Type	–
		ROUND
	Fit-Type	SQUARE
		RECTANGLE OBROUND SD WD


■ ACCESSORIES

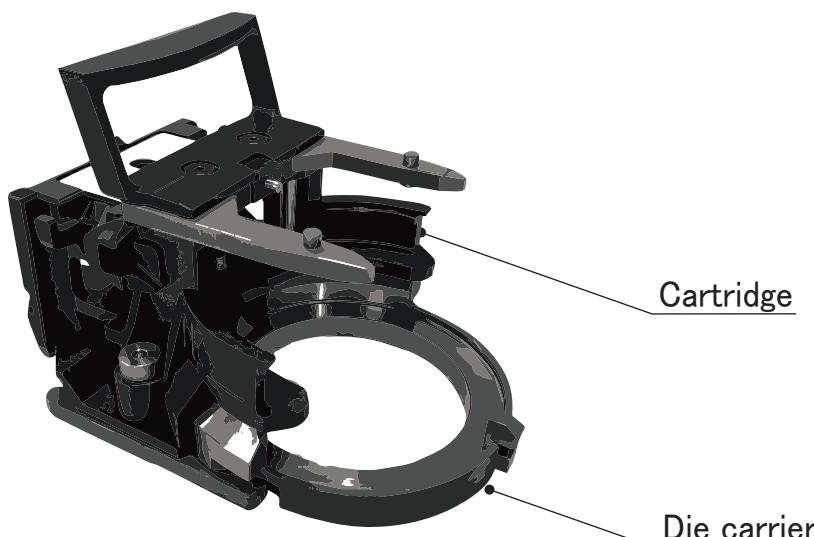

	Type	Detail
Accessories	Set	Cartridge + Die carrier
		Cartridge
	Parts	Die carrier

INSTRUCTION MANUAL

PARTS NAME

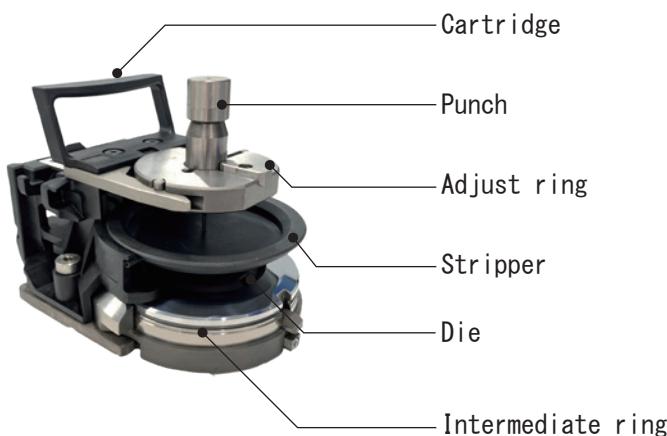

CHECK POINTS

- Please follow the machine instruction manual before use punching tools.
- Please check there are no cracks or seizes. If you find such abnormal conditions, do not use the tools.
- Machine, Cartridge should be kept clean. (ex: Slugs in die holders can cause a serious damage on the tools)
- Cutting edge of the tooling must be sharpened when it is dull.

PUNCH

Insert Adjust ring to the punch.



DIE

Type 1: Insert the Die to Intermediate ring.



CARTRIDGE

Insert Punch and Die and Stripper to cartridge.



Widest variety special forming tools in advanced technology.

Conic Special tools


Conic offers the best performance special tools to the customer.

Conic engineers always try to find the best solution of productive tools to the customer which uses the most advanced tooling technologies.




CENTER POINT



FORMING UP

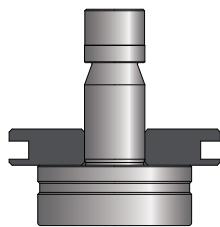


FORMING DOWN

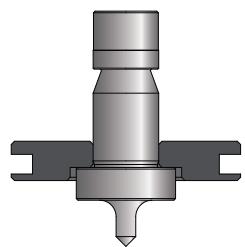

FORMING UP

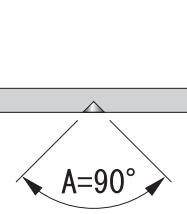

FORMING DOWN

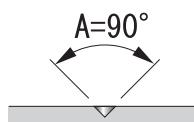



Forming process of making conical recess (center point).
Used for locator, landmark and so on.

BURRING FOR THREAD FORM




FORMING UP



FORMING DOWN

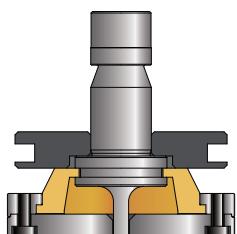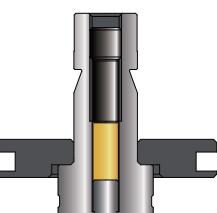

Screw size	Diameter (A)	Pre-hole
M2. 5	$\phi 2.1$	$\phi 1.2$
M3	$\phi 2.6$	$\phi 1.5$
M4	$\phi 3.4$	$\phi 2.0$
M5	$\phi 4.3$	$\phi 2.4$
M6	$\phi 5.1$	$\phi 2.8$




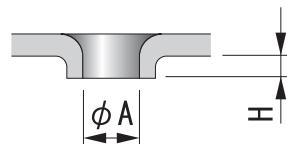
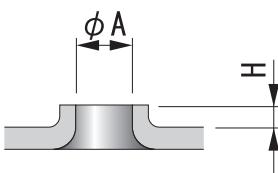


Forming process for making tubes of threading for screw.
Threading for screws and increased bearing area for tubes.


HALF SHEAR

FORMING UP


FORMING DOWN

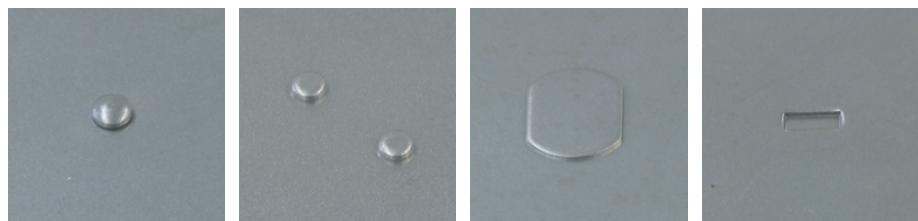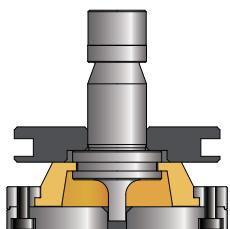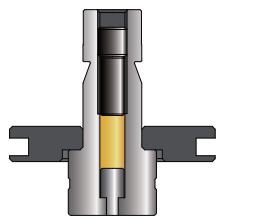

FORMING UP

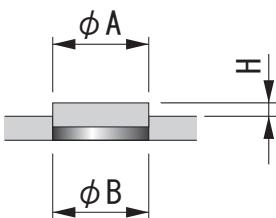

FORMING DOWN




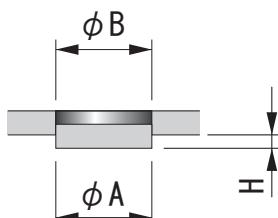


Forming process of pierce half of material thickness.
Used for locator or stopper.


EMBOSS (DIMPLE)

FORMING UP


FORMING DOWN

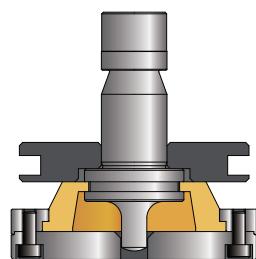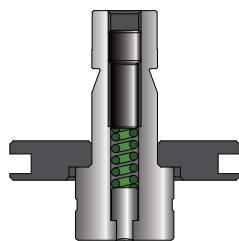

FORMING UP

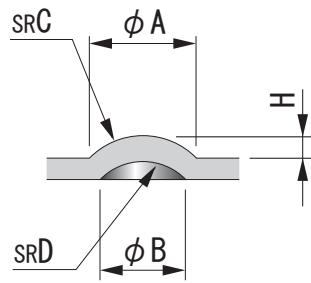


FORMING DOWN

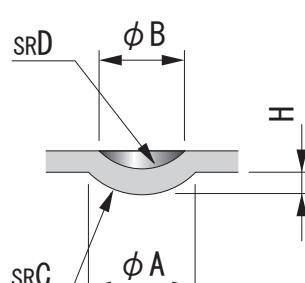


Forming process of embossing material like dimple.
Used for locator or decorative pattern of the material.

COUNTERSINK FOR COUNTERSUNK SCREW (CHAMFERING)




FORMING UP

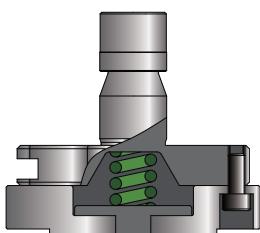


FORMING DOWN

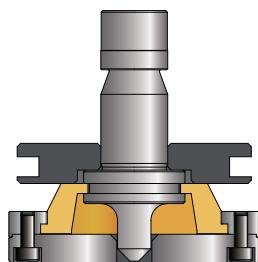

FORMING UP

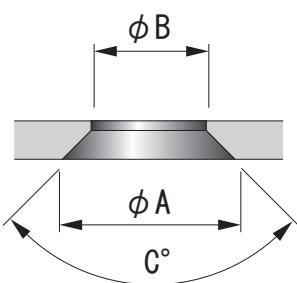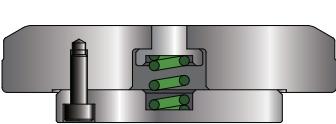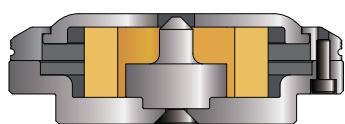

FORMING DOWN

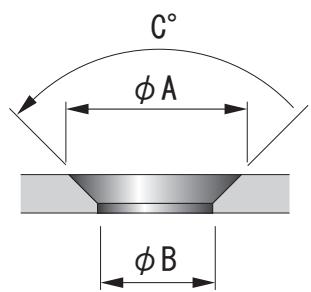


Forming process of making a chamfer to material.


Used for sink a countersunk screw head, make chamfer to a corner after punching, guide of tapping.

COUNTERSINK



FORMING UP

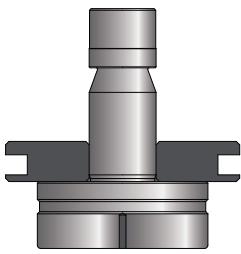


FORMING DOWN

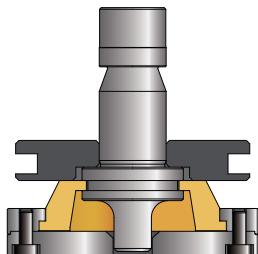

FORMING UP

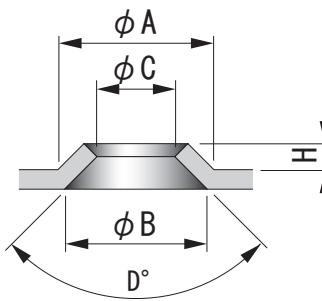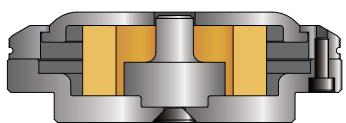

FORMING DOWN

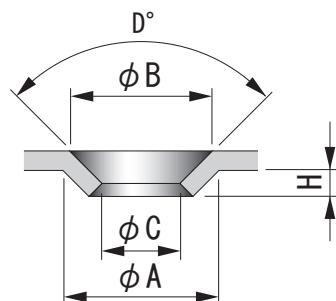


Forming process of embossing work, such as dish-shaped.


Used for sink a countersunk screw head, or used for nonslip.

COUNTERSINK BURRING





FORMING UP

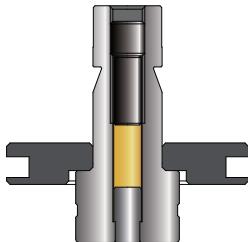

FORMING DOWN

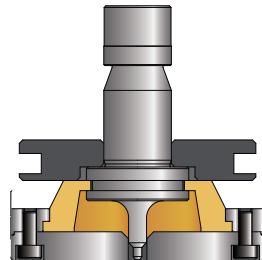

FORMING UP

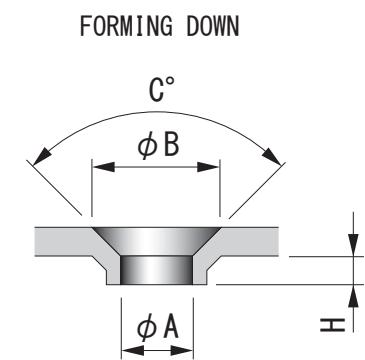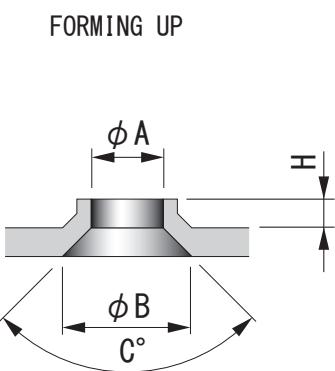


Forming process for making tube of threading for screw, and at the same time make a chamfer in the entrance part.


Used for threading for screw. Used to guide at the time of tapping.

ONE PITCH THREAD FORM





FORMING UP

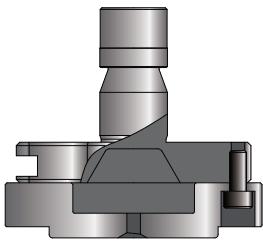

FORMING DOWN

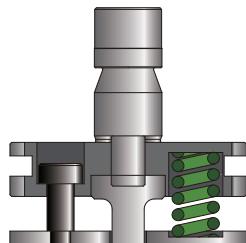


FORMING UP

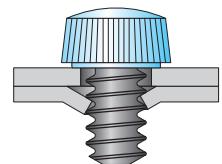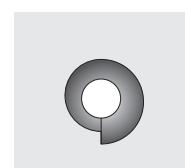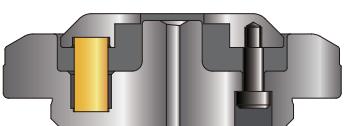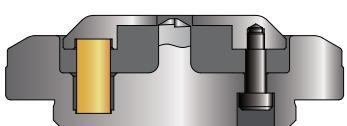


Forming process of making the one pitch thread form. Used to screw in place that does not require a heavy strength.

COUNTERSINK BURRING



FORMING UP

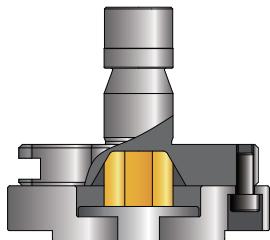


FORMING DOWN

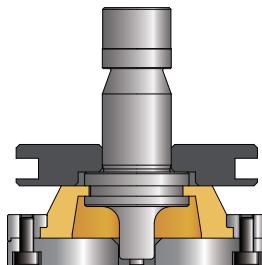

FORMING UP

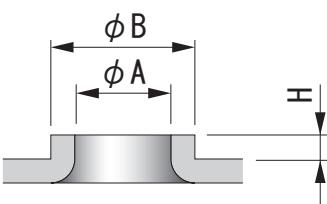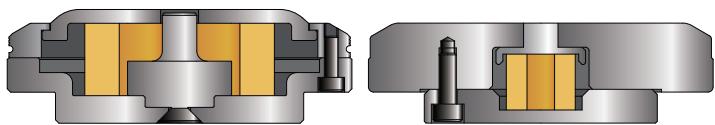

FORMING DOWN

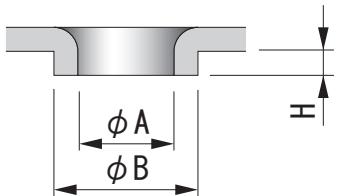


Forming process for making tubes.


Used to guide or protect the code and pipe.

CURLING


FORMING DOWN

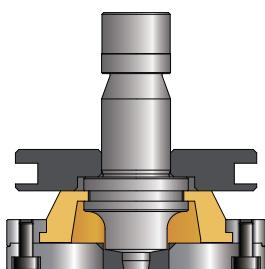

BURRING

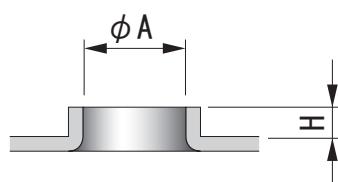

CURLING

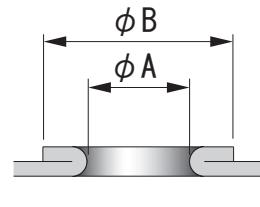


Forming process to bend the material after forming of burring.

Used to guide or protect the code and pipe.


The order of processing is Pre-hole \Rightarrow Burring \Rightarrow Curling.

EMBOSS




FORMING UP

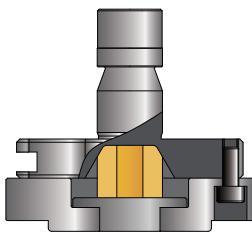


FORMING DOWN

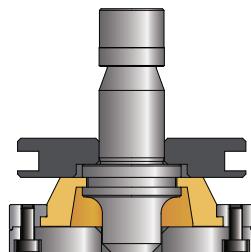

FORMING UP

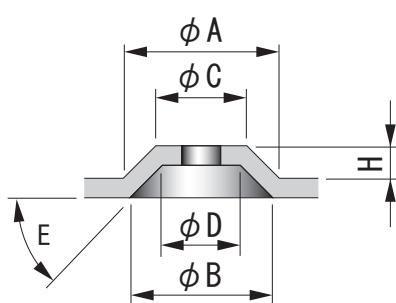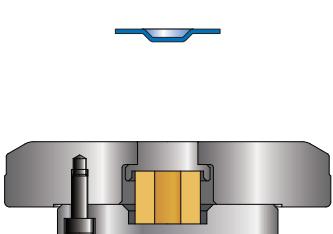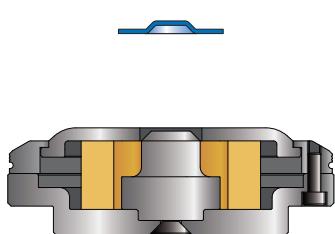

FORMING DOWN

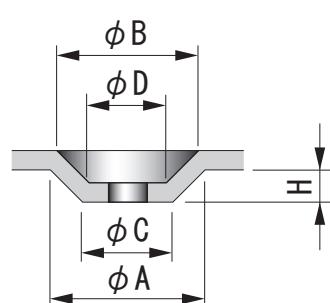


Forming process to produce raised or sunken shape.

Used for sinking a head of bolts or nuts.


Used for the seat of the product.

KNOCKOUT




FORMING UP

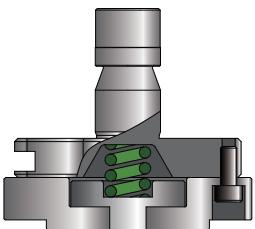


FORMING DOWN

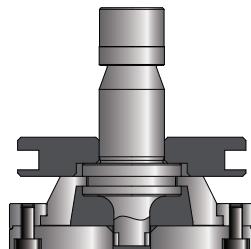

FORMING UP

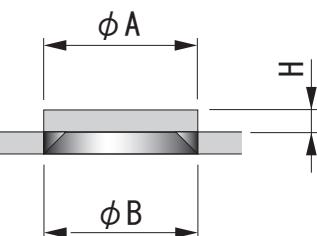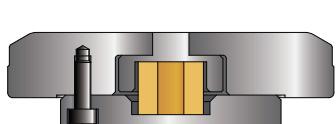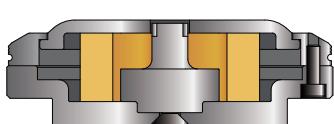


FORMING DOWN

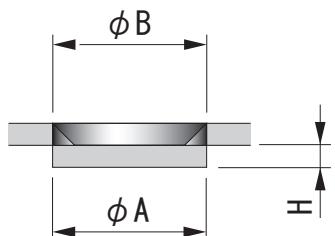


Forming process of piercing a hole and keep the slug on the sheet metal by tabs.

When using a hole, remove the slug using a screwdriver.

BRIDGE , DOUBLE BRIDGE

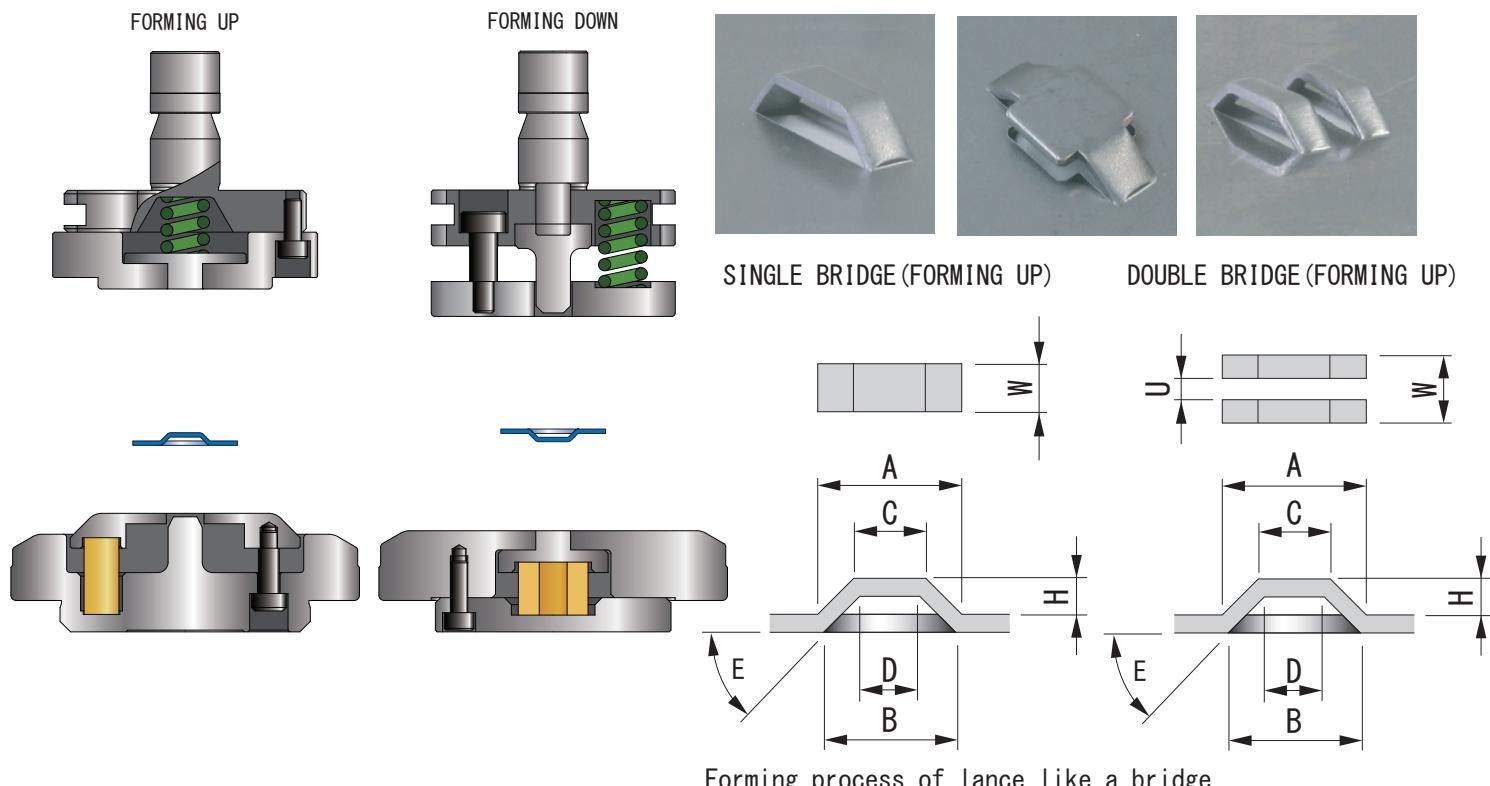


LANCE (Z-BENDING)

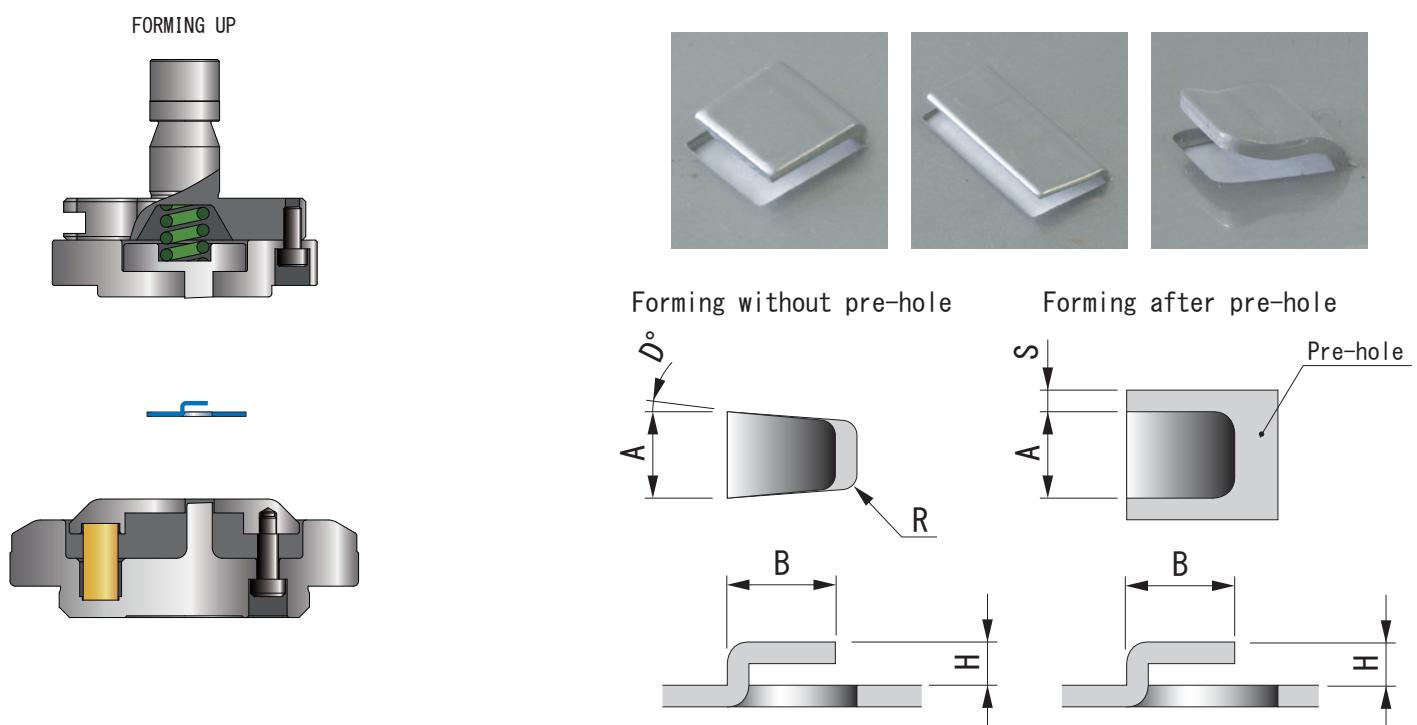


Used for hook, locator and stopper.

LANCE (L-BENDING)


FORMING UP

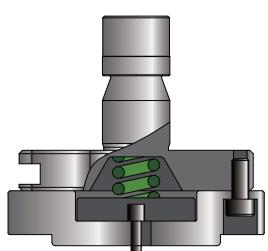

Forming without pre-hole

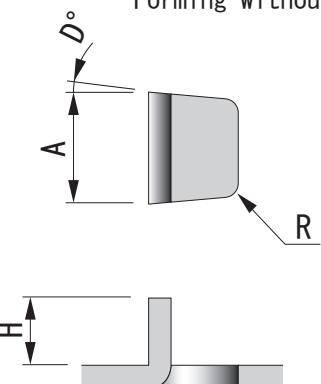

Forming after pre-hole

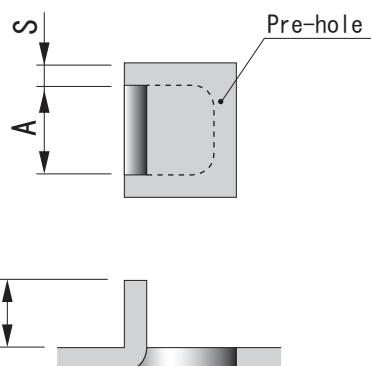


Forming process of lance like L figure.


Used for hook, locator and stopper.

BENDING (OFFSET TOOL)


FORMING UP

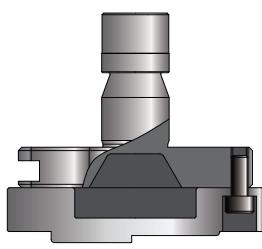

FORMING UP

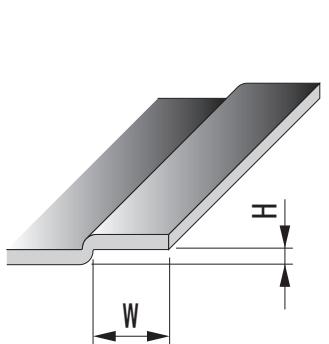

FORMING DOWN

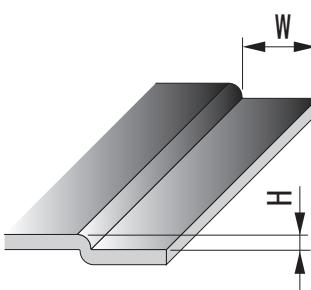


Forming process of bending that can hit continuously along the sheet.


Used for the overlaying the sheet.

LANCE FOR AIR FLOW

FORMING UP

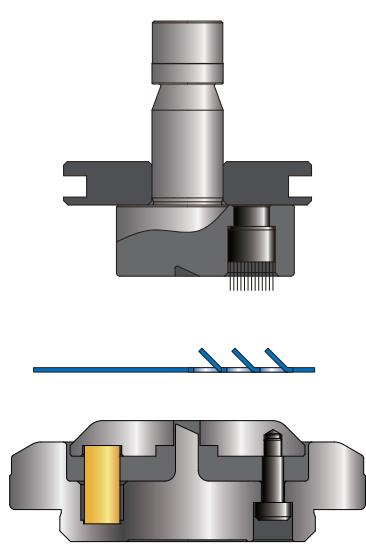


FORMING UP

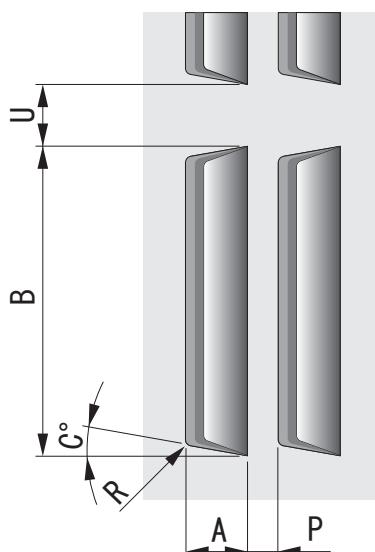

Forming process of lance to create an opening.


Used to provide air flow or ventilation.

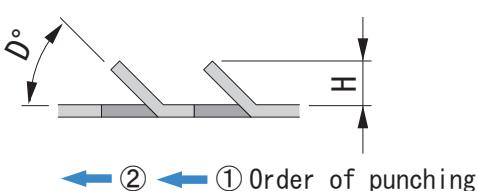


② ① Order of punching

LOUVER FOR AIR FLOW

FORMING UP

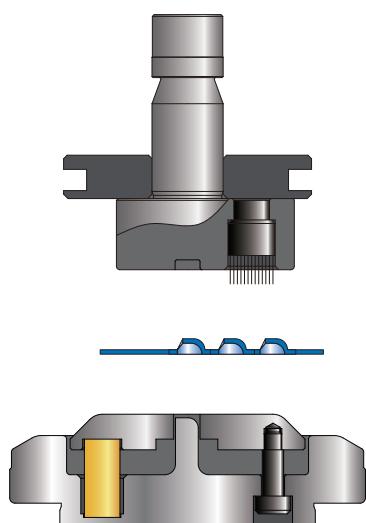

FORMING UP

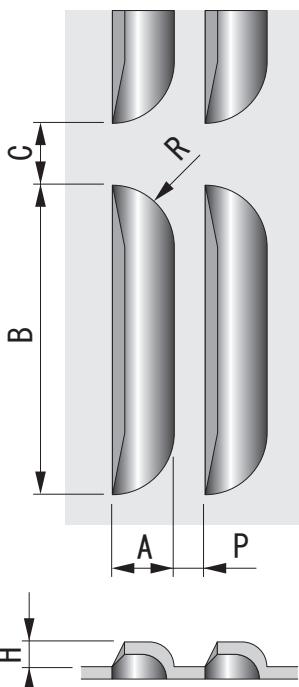



Forming process of louver to create an opening.

Used to provide air flow or ventilation.

Order of punching ① → ② →

CARD GUIDE



FORMING UP

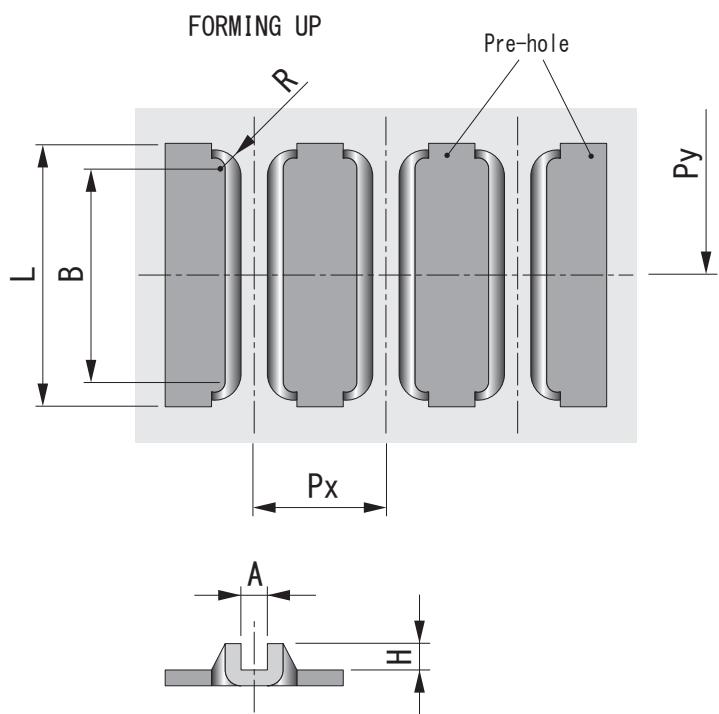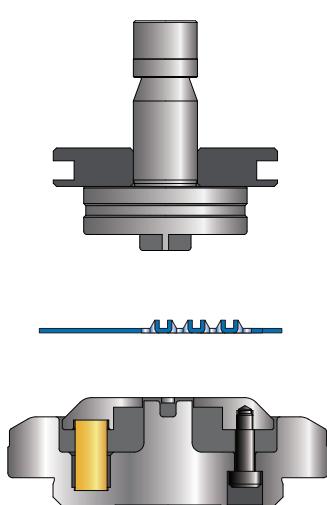

Forming process to form U-groove for a printed circuit board.

BEADING

FORMING UP

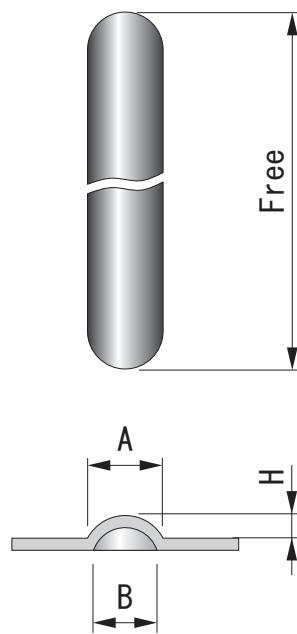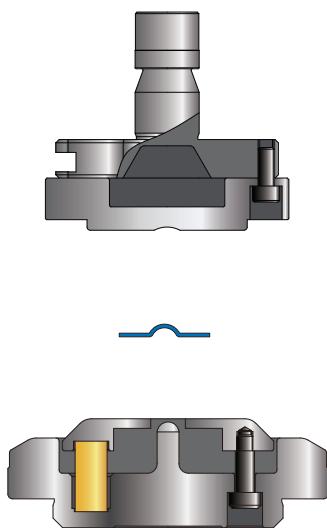


Forming process of embossing that can hit continuously along the sheet.


Used for strengthening, nonslip or decoration.

MARKING (STAMPING)


FORMING UP

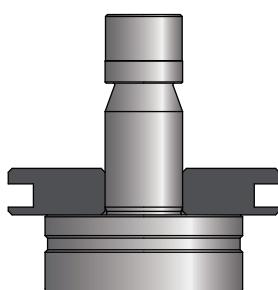



FORMING DOWN

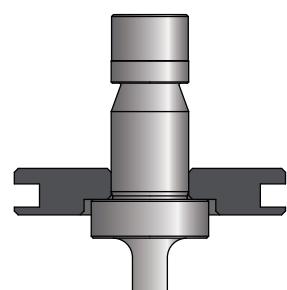

FORMING UP

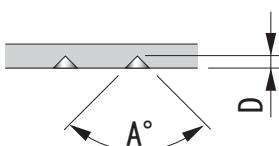

FORMING DOWN

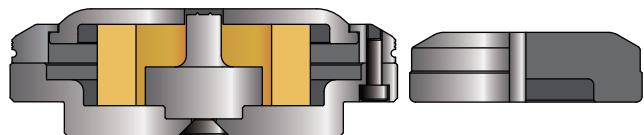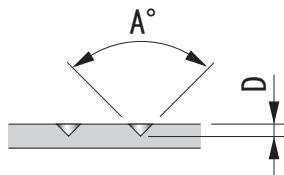


conic 金型 ABC


Forming process of stamping the character or logo etc.

MARKING (EMBOSS)


FORMING UP

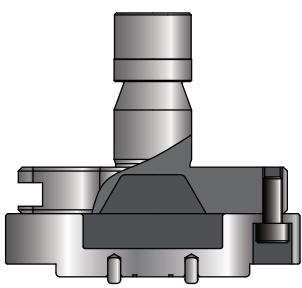



FORMING DOWN

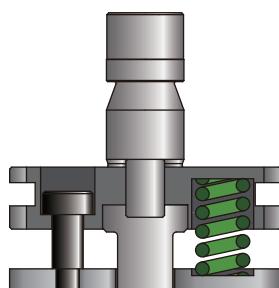

FORMING UP

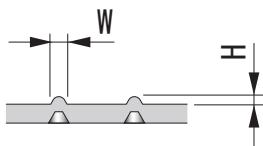

FORMING DOWN

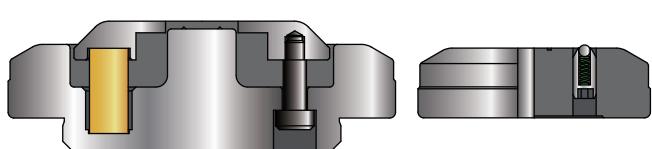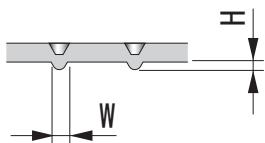

conic ABC





Forming process of embossing the character or logo etc.

CALCULATE PUNCHING FORCE (TONNAGE)

Tonnage capacity is different depending on machines.
Use the calculation formula below to prevent from over tonnage.

$$\text{Tonnage (ton)} = \frac{\text{Circumference (mm)} \times \text{Material thickness (mm)} \times \text{Shear resistance (kg/mm}^2\text{)}}{1000}$$

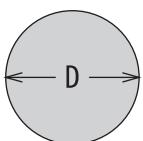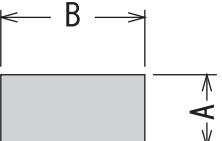Circumference	
Round	Shaped
Diameter x 3.14	(Length dimension + Width dimension) x 2
	
Circumference = D x 3.14	Circumference = (A + B) x 2


Shear resistance by material	
Material	Shear resistance (kg/mm ²)
Mild Steel	26~35
SS400	33~42
Stainless Steel	52~56
Aluminum	7~16
Copper	18~30
Brass	22~40

<Calculation example>

The tonnage when piercing $\Phi 40$ to Mild Steel T=1.6mm.

$$\frac{\text{Circumference} \times \text{Material thickness} \times \text{Shear resistance}}{1000} = \text{tonnage}$$

$$\frac{40 \times 3.14 \times 1.6 \times 35}{1000} = 7 \text{ (ton)}$$

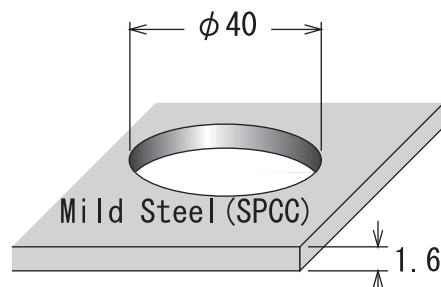

DIE CLEARANCE


■ DIE CLARANCE IS ...

Die clearance is difference between punch diameter and die diameter.

$$\text{Die clearance} = B - A$$

■ RECOMMENDED DIE CLARANCE

$$\text{Die clearance} = \text{Material thickness} \times \text{Clearance Ratio}$$

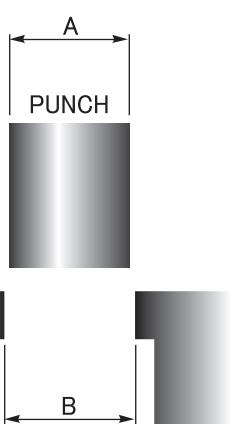


Material	Clearance Ratio	Material thickness							
		0.5	0.8	1.0	1.2	1.5	2.0	2.3	3.2
Mild steel	0.15	0.07	0.1	0.15	0.2	0.25	0.3	0.4	0.5
Stainless steel	0.2	0.1	0.15	0.2	0.25	0.3	0.4	0.5	0.6
Aluminum	0.1	0.07	0.1	0.1	0.15	0.15	0.2	0.25	0.35
Copper	0.1	0.07	0.1	0.1	0.15	0.15	0.2	0.25	0.35


※Minimum Clearance is 0.07 for TRUMPF Punching machine.

JOINT METHOD


CORNER JOINT

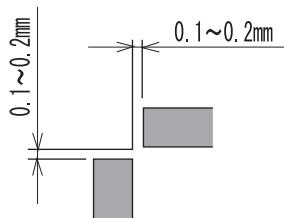


Joint of corner part

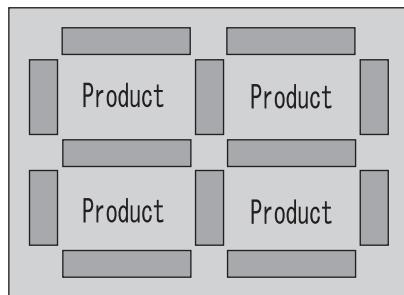


MICRO JOINT

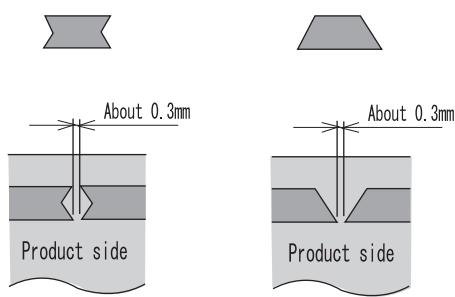


Joint of straight part

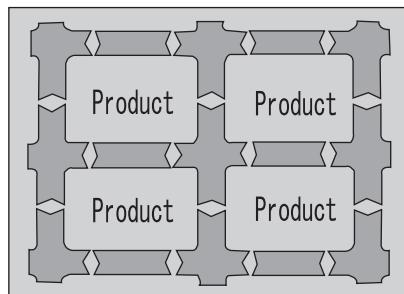

WIRE JOINT

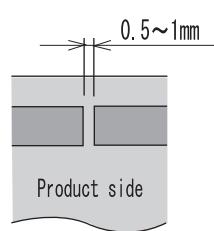

Joint of straight part

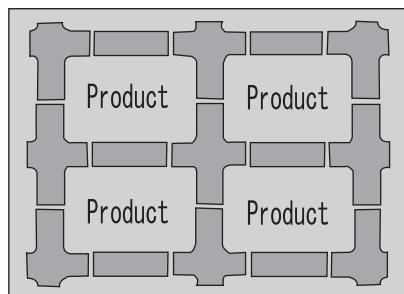

CORNER ROUNDING

Standard Corner rounding tool	Corner rounding tool with tangent line	Corner rounding tool with joint